

FurnitureLeisure.com PicnicFurniture.com PicnicTableSupplier.com ParkTables.com UBrace.com

1-800-213-2401 | sales@furniturelsiesure.com



Model # T6PERF

3/4/2019 Page 1 of 8

HARDWARE



5/16" x 1" Machine Bolt



5/16" Washer



5/16" Kep Nut

3/4/2019 Page 2 of 8

PRODUCT SPECIFICATIONS

T6PERF 6' PORTABLE PICNIC TABLE WALK-THROUGH DESIGN

Top & Seats: Top and seats shall have a 1 1/2" radius edge, fabricated from a 14ga plate. Holes are precision punched at 5/8" diameter. 7 gauge x 1-1/2" flat bar center support and mounting bracket understructure. Electrically MIG welded.

Coating: Oven fused functionalized polyethylene copolymer-based thermoplastic. Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.

Frame: 2-3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. Cross braces 1" O.D. x 16 gauge pre-galvanized structural steel tubing. Brace attachment points 1-1/2"x1-1/2"x3/16" steel angle. Seat and top mounting points 7 gauge x 1-1/2" die stamped steel flat bar. Legs are bent over a mandrel through the bend radius producing a wrinkle free bend. All electrically MIG welded.

Frame Coating: Electrostatic powder coated application oven cured.


Hardware: All stainless steel hardware fasteners.

Dimensions: 6' portable picnic table walk-through design. Top is 30" wide x 72" long and is 30-1/2" high. Seats are 12" wide x 72" long and 18-1/2" high. Outside to outside dimension is 68-1/2" x 72".

3/4/2019 Page 3 of 8

COMPONENTS


Optional Surface Mount Hardware: 5/16" x 5" Concrete Expansion Anchor Bolts (Not Included)

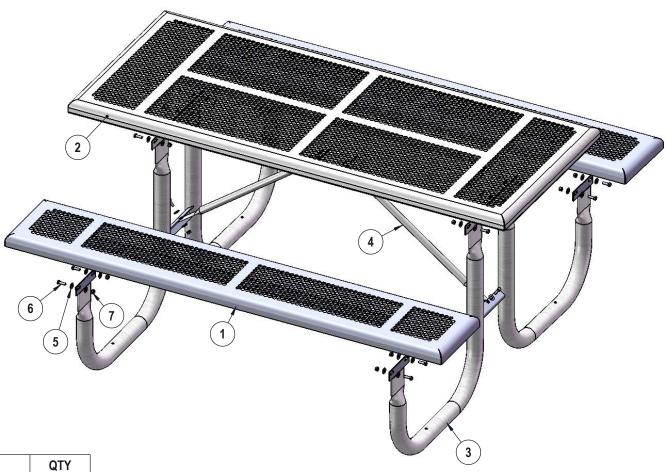

ITEM NO.	PartNo	DESCRIPTION	QTY
1	T-PR72-S	6' Punched Rolled Seat	2
2	T-PR72-T	6' Punched Rolled Top	1
3	P-V238	238 Vinyl Frame	2
4	P-01-04-0125	29 7/8" Brace	2
5	33-02-0007	5/16" SS Washer	40
6	33-05-0029	5/16" x 1" Machine Bolt (SS)	20
7	33-03-0012	5/16" Kep Nut (SS)	20

3/4/2019 Page 4 of 8


STEP 1

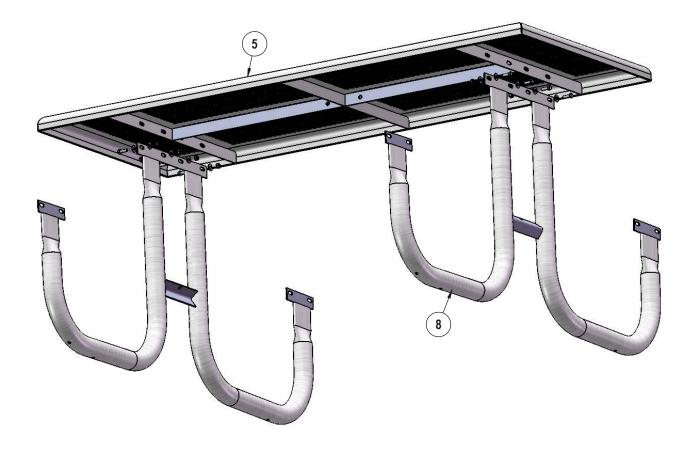

Attach the 6' Punched Rolled Top to the Frames using specified hardware.

3/4/2019 Page 5 of 8


STEP 2

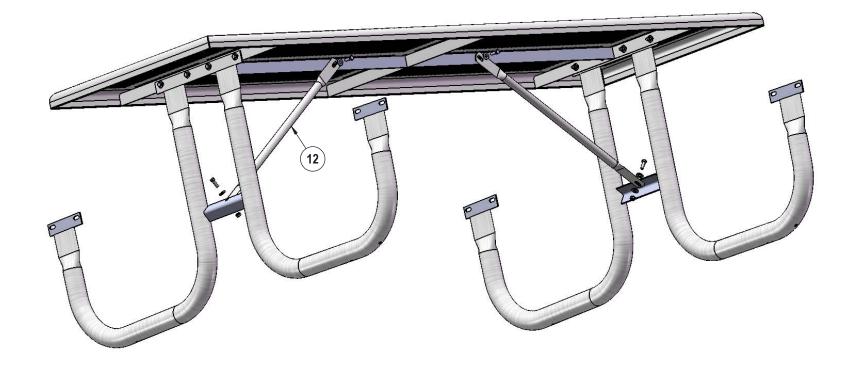

Attach the 29-7/8" Braces to the 6" Punched Rolled Top and the Frames as shown using specified hardware.


3/4/2019 Page 6 of 8

STEP 3

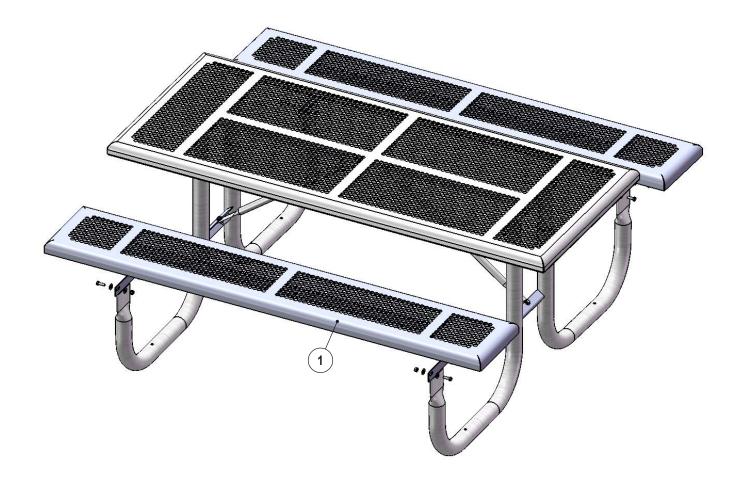

Attach the 6' Punched Rolled Seats to the Frames using specified hardware.

3/4/2019 Page 7 of 8

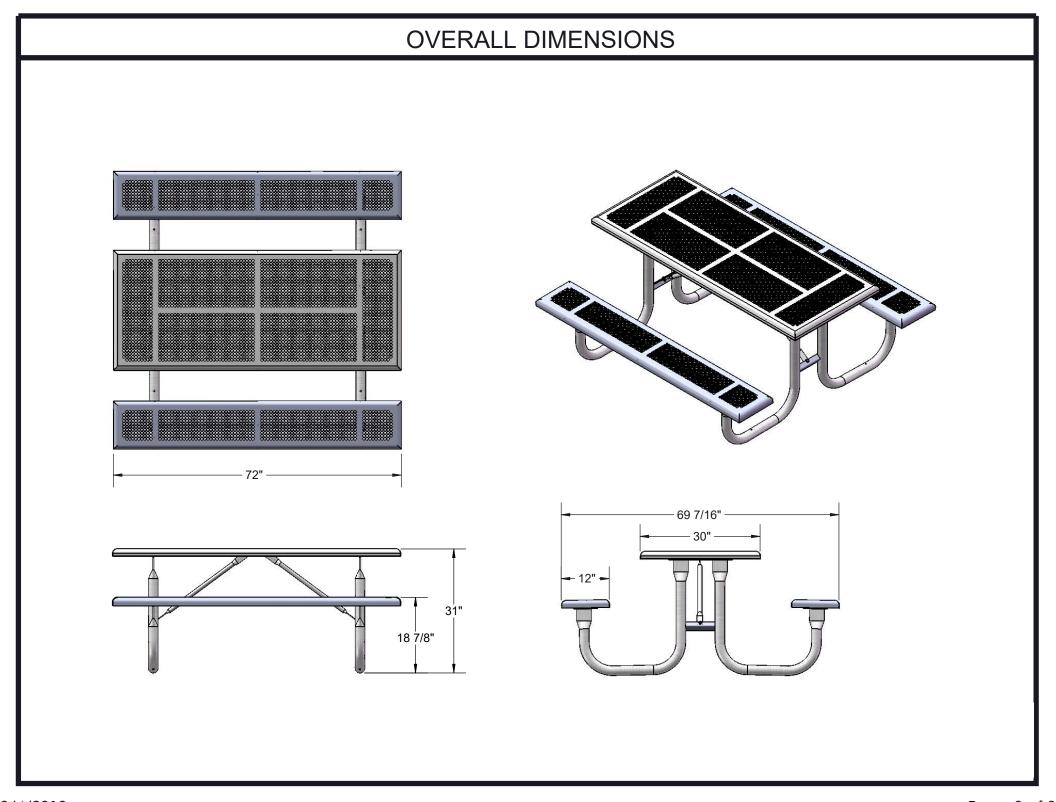

3/4/2019 Page 8 of 8